ALARM MANAGEMENT PRODUCTS

1



Model 910 Annunciator

For Power Generation, Transmission & Distribution, Petroleum, Petrochemical and Other Process Industries

AMETEK's Model 910 self-contained 10-alarm point annunciator is commonly used throughout the process industry. Ten alarm points of dedicated annunciation at its best. This annunciator accepts ten dry or ten 120 VAC wetted field contact inputs. Select from flush panel mounting or wall mounting type hardware to fit your physical installation requirements. On board field selectable jumpers allow the user to select from seven ISA alarm sequences. Specify the primary source voltage to the system along with the field contact voltage, integral or remote horn, flush panel or wall mounting style and you have successfully configured the best 10-point annunciator in the world, AMETEK's Model 910.

AMETEK's Model 910 annunciator can be found providing dedicated annunciation in many of the world's petrochemical and petroleum manufacturers plants as part of the alarm and safety shutdown systems. The unit is ideal for mounting in the field at a local process and sending a "local process alarm" signal to the control room.

Safety and swift alarm notification to an operator are important to the owners and operators of all process plants in all industries. Power generating plants, power distribution substations, pharmaceutical, paper and pulp, food processing and packaging, water treatment, water distribution, gas distribution, mass transportation, weapons manufacturing, automotive vehicle and parts manufacturing facilities all need reliable monitoring of their process variables through the dedicated annunciation provided by AMETEK's self-contained Model 910 annunciator

FEATURES AND BENEFITS

- Provides dedicated annunciation
- Completely self-containted
- 3 UL listed 2017
- Approved for use in Class 1 Div, 2 applications
- 5 Long life LED illumination
- 6 Seven field selectable ISA sequences
- 7 Flush panel or wall mount cabinets
- Horn relay and reflash relay contact output
 - Integral or remote mounted horn



INPUT POWER SOURCE

· 120 VAC, 220 VAC, 125 VDC OR 24 VDC

LEGENDS

· Field replaceable paper card behind clear plastic

ILLUMINATION

· Red LED

FIELD TERMINATION

· 14 AWG solid or stranded wire

CABINET

· 16 gauge steel painted black

AGENCY APPROVALS


- · UL 2017 General Purpose Signaling Devices and Systems
- · FM Approved Class 1 Div. 2, Groups A, B, C & D

EMC COMPLIANCE

- · ANSI/IEEE C37.90-1978 (SWC)
- · SAMA PMC 33.1-1978, Class 2, Bands b&c(RFI)

ENVIRONMENTAL

- · Storage: -40° to 185°F (-40° to 85°C)
- Operating: 32° to 122°F (0° to 50°C)
- · Humidity: 10 to 95% RH (non-condensing)
- NEMA 4 and 4X enclosures optional

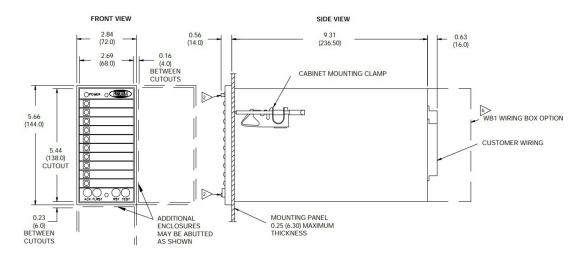

SIDE VIEW (FLUSH MOUNT) FRONT VIEW (FLUSH MOUNT) (318.0)(90.5)BEZEL 10.0 **FASTENERS** (254.0) OPOWER OF THE LAND REMOVABLE PLUG-IN SIDE COVER 6.50 ASSEMBLY (165.5) (P.C.B.) CUSTOMER 6 ELECTRICAL 6.0 (152.5) TERMINALS Ф 2 0.187 DIAMETER HOLE (228.0)MINIMUM CLEARANCE FOR IN REMOVING PLUG-IN ASSEMBLY (MM)

NOTES:

1. All dimensions are in inches with corresponding millimeter dimensions in paraentheses. ∑To remove - pull on fasteners. his release's module and front display from cabinet, pull straight out to complete removal. To replace - slide module into cabinet, press on the module front plate (not fasteners) to seat module into connectors, then push on fasteners to secure module.

- 3. Terminal blocks are wired from rear.
- 4. Individual point windows sizes are 0.39 (10.0) X 2.09 (53.0) wide. This allows 2 rows of 22 characters per row using standard 12 pitch typewriter type, 0.12 inch high characters.
- 5. Window legend paper is accessible by removing front
- Two conduit openings, one at top and one at bottom for one inch conduit fittings.

FOR FLUSH MOUNT:

Two conduit openings, one at top and one at bottom for one inch conduit fittings.

Remove plug-in assembly as follows:

- A. Pull front display straight out using the fasteners.
- B. Grasp top and bottom of bezel assembly and pull straight out.
- C. Pull plug-in assembly out from left side of enclosure.

To replace, reverse above procedure except when resinstalling front display, press on the front plate (not fasteners) to seat display into connector, then push in on fasteners.

WORLD HEADQUARTERS

255 North Union Street Rochester, NY 14605 Toll Free: +1.800.950.6686 Tel: +585.263.7700 Fax: +585.454.7805

EUROPEAN HEADQUARTERS

+44.770.280.9377 power.sales@ametek.com

ASIA PACIFIC **HEADQUARTERS**

Singapore +65.6484.2388 sales@ametekasia.com

AMETEK INSTRUMENTS INDIA PVT. LTD.

Bengaluru +91.80.6782.3252 power.sales@ametek.com

WEBSITE

www.ametekpower.com

EMAIL

pi.marketing@ametek.com











