



NT2-24D AUDIBLE DEVICE WIRING

DIAGRAM SHOWS NOVATONE HORN WITH P1 TERMINAL BLOCK ON P.C. BOARD ATTACHED TO HORN (REF. DWG. 57100-48) FOR EARLIER VERSIONS WITH PIGTAIL LEADS, CONNECT BLACK TO OV, RED TO +24 AND BLUE TO FLASHER TERMINAL (REF. DWG. 57100-44).

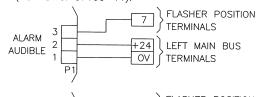

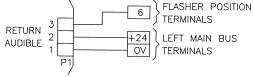

ALARM PLUG-IN CARD MODEL NO.	91 AR 6
SINGLE POINT = 91	
SEQUENCE CODE	
VARIATION	
INPUT OPTIONS DRAWING LIST ———— REFER TO 91900-9	
OUTPUT OPTIONS DRAWING LIST ——— REFER TO 91900-9	

© 1999

DESCRIPTION

90450-AR6-2-01-01.dwg

TOL. UNLESS SPECIFIED

INCHES

.X = .015 .XX = .010 .XXX = .005

MILLIMETERS

X.0 = 1.0 0.X = 0.4 0.XX = 0.1

ANGLES ±0.30 SCALE INCH

NONE (MM)

OPERATIONAL SEQUENCE "ARRS"			
INPUT STATUS	VISUAL	ALARM AUDIBLE	RETURN AUDIBLE
ALARM OR TEST	FAST FLASH	ON	OFF
ACKNOWLEDGE	STEADY-ON	OFF	OFF
RETURN TO NORMAL	SLOW FLASH	OFF	ON
RETURN ACKNOWLEDGE	SLOW FLASH	OFF	OFF
RESET	OFF	OFF	OFF

NOTES:

- 1. IF A NEW ALARM OCCURS WHILE TESTING, POINT WILL INDICATE ALARM CONDITION (RE-ALARM) AFTER ACKNOWLEDGE PUSHBUTTON IS OPERATED.
- 2. POINT WILL INDICATE ALARM WHEN TEST PUSHBUTTON IS OPERATED IF THE VISUAL INDICATOR IS OFF OR STEADY-ON.
- 3. IF POINT REALARMS WHILE SLOW FLASHING (RETURNED TO NORMAL) POINT REVERTS TO ALARM STATUS.
- 4. A SINGLE AUDIBLE DEVICE MAY BE USED BY CONNECTING TERMINALS 6 & 7 OF THE FLASHER POSITION TOGETHER, (SEQUENCE 'ARS')

PAWLARM DWN. BY S. KUNCA

APPD/DATE CNL 12/15/99

THIRD ANGLE PROJECTION

PANALARM 1725 WESTERN DRIVE, WEST CHICAGO, IL., 60185, U.S.A. PHONE: 1-630-231-5900 FAX: 1-630-231-4502

FAX: 1-630-231-4502

-B-

CUSTOMER WIRING DIAGRAM AND SEQUENCE 'ARRS' INFORMATION FOR SERIES 90 UNIVERSAL P.C.B.

SHEET 1 OF 1

DWG. NO.

90450-AR6-2