


MODEL 90PDA4 INTEGRAL HORN MOUNTED IN ANNUNCIATOR CABINET ON PC BOARD



NOTES:

- 1 FOR RINGBACK AUDIBLE, WIRE FLASHER TERMINAL 6 TO SECOND 90PD** TERMINAL 6.
- 2. WATTAGE 0.4, 16mA AT 24VDC, UNFILTERED.
- 3. SOUND LEVEL AT TEN FEET. MIN. 68db.
- 4 UNIT CAN BE IN ANY CARD POSITION, HOWEVER ADJACENT CARD (RIGHT) MUST BE EMPTY.

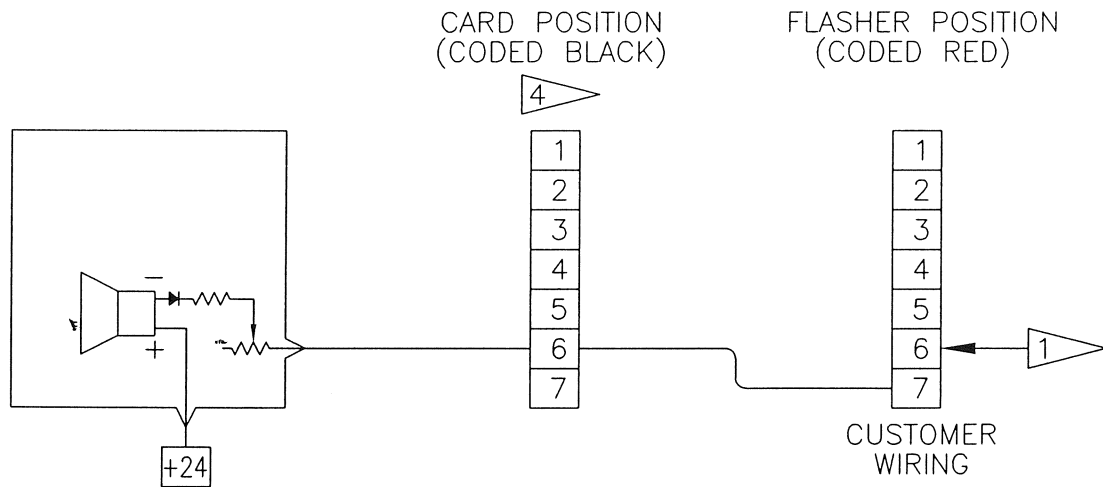


PANALARM

1725 WESTERN DRIVE, WEST CHICAGO, IL., 60185, U.S.A.
 PHONE: 1-630-231-5900 FAX: 1-630-231-4502

TOLERANCE UNLESS SPECIFIED
 INCHES MILLIMETERS
 .X = .040 X.0 = 1.0
 .XX = .015 0.X = 0.4
 .XXX = .005 0.XX = 0.1
 ANGLES ±0°30'

INCH
 (MM)

THIRD ANGLE PROJECTION



REV	ECN NO.	BY	APPD	DATE	SCALE NONE	© 1985
00	9284	JJ	RCV	12/30/85	DRWN BY JJ / SK	
01	9284-01	JJ	AHD	01/24/86	APPD RCV	
02	11872	SK	<i>MA</i>	6/15/01	DATE 12/30/85	
					90450-PDA_-1-02-01.dwg	
					SHEET 1 OF 1	

WIRING DIAGRAM, INTEGRAL HORN, WITH VOLUME CONTROL CONTINUOUS TONE (90PDA4)

DWG. NO. 90450-PDA*-1

-A-